

AIR ELIMINATOR/STRAINER #1506A-20

ITEM NO.	NAME OF PART	MODEL 1506A-SP	MODEL 1506A-AF	MODEL 1506A-AFSK	MODEL 1506A-SS	MODEL 1506A-AL
1	Upper Poppet Plate	352-80-035	352-80-035	352-80-035	352-80-035	352-80-035
2	Lower Poppet Plate	352-80-045	352-80-045	352-80-045	352-80-045	352-80-045
3	Cup Disc	504-28-034	504-28-034	504-28-034	504-28-034	504-28-034
4	Poppet Seal	502-26-485	504-28-070	504-28-070	504-28-070	504-28-070
5	Seal Retainer	504-28-990	353-03-040	353-03-040	353-03-040	353-03-040
6	Spacer	504-28-633	504-28-633	504-28-633	504-28-633	504-28-633
7	Collar Pin $\frac{3}{32}$ Dia. x $\frac{3}{4}$ Collet Pin $\frac{3}{32}$ Dia. (Not Required On Gravity Service)	562-05-618	504-28-660	504-28-660	562-05-020	562-05-020
8	Ball $\frac{3}{16}$ Dia. (Not Required On Gravity Service)	562-01-301	562-01-301	562-01-301	562-01-301	562-01-301
9	Washer	504-28-895	504-28-895	504-28-895	504-28-895	504-28-895
10	Valve Spring	504-28-705	504-28-705	504-28-705	504-28-705	504-28-705
11	Spring Guide	507-01-408	507-01-408	507-01-408	507-01-408	507-01-408
12	Sq. Hd. Pipe Plug $\frac{1}{4}$ "	353-02-240	353-02-240	353-02-240	353-02-240	353-02-240
13	Valve Stem Level	504-28-800	504-28-800	504-28-800	504-28-800	504-28-800
14	Valve Lever Spring (Not Required On Gravity Service)	502-26-415	502-26-415	502-26-415	502-26-415	502-26-415
15	Seal	504-08-155	504-08-155	504-08-155	504-08-155	504-08-155
16	Special Screw	504-28-010	504-28-010	504-28-010	504-28-010	504-28-010
17	Pivot Pin	504-27-320	504-27-320	504-27-320	504-27-320	504-27-320
18	Float Connecting Pin	562-10-110	562-10-110	562-10-110	562-10-110	562-10-110
19	Roll Pin - $\frac{3}{16}$ Dia. x $\frac{3}{16}$	562-10-117	562-10-117	562-10-117	562-10-117	562-10-117
20	Roll Pin - $\frac{3}{16}$ Dia. x $\frac{5}{16}$	562-10-110	562-10-110	562-10-110	562-10-110	562-10-110
21	Roll Pin - $\frac{3}{16}$ Dia. x $1\frac{1}{16}$	504-28-370	504-28-370	504-28-370	504-28-370	504-28-370
22	Shell	504-27-325	504-27-325	504-27-325	504-27-325	504-27-325
23	Float Lever	350-02-205	350-02-205	350-02-215	350-02-215	350-02-205
24	2" Companion Flange	502-26-430	502-26-435	502-26-435	502-26-435	502-26-430
25	Gasket (Square)	353-02-110	353-02-110	353-02-115	353-02-120	353-02-125
26	Strainer Cover	353-03-025	353-03-030	353-02-105	353-02-105	353-02-025
27	Poppet Assembly	353-02-085	353-02-085	353-02-085	353-02-085	353-02-085
28	Float Guide	502-26-460	502-26-460	502-26-460	502-26-460	502-26-455
29	Butterfly Assembly	504-28-090	504-28-090	504-28-090	504-28-090	504-28-090
30	Gasket	353-02-225	353-02-225	353-02-235	353-02-235	353-02-225
31	Poppet	504-20-750	504-20-750	504-20-755	504-20-760	504-28-755
32	Valve Stem Assembly	353-02-060	353-02-055	353-02-055	353-02-065	353-02-060
33	Strainer Screen (40 Mesh)	353-02-205	353-02-205	353-02-205	353-02-205	353-02-205
34	Float Assembly	353-02-020	353-02-010	353-02-015	353-02-025	353-02-010
35	Valve Cover	353-80-065	353-80-065	353-80-070	353-80-050	353-80-060
36	Air Eliminator Body	353-02-105	353-02-150	353-02-160	353-02-175	353-02-130
37	Top Cover	557-03-058	557-03-058	557-03-058	557-03-060	557-03-061
38	Top Cover & Float Assembly OR Top Cover & Float Assembly ("Sp", Teflon-Trimmed) OR Top Cover & Float Assembly (Gravity Service) OR Top Cover & Float Assembly ("Sp", Teflon-Trimmed, Gravity Service)	561-01-105	561-01-105	561-76-144	561-76-144	561-01-10
39	Hex. Nut $\frac{3}{16}$ "	555-11-076	555-11-076	555-11-076	555-11-076	555-11-07
40	Hex. Hd. Cap Screw - $\frac{5}{16}$ " x 1 Special Screw - $\frac{5}{16}$ " x 1	555-11-220	555-11-220	555-11-228	480-00-003	555-11-22
41	Hex. Hd. Cap Screw - $\frac{5}{16}$ " x 1- $\frac{1}{2}$ Special Screw - $\frac{5}{16}$ " x 1- $\frac{1}{4}$	562-03-640	562-03-640	562-03-642	562-03-642	562-03-64
42	Lockwasher - Kantlick #10	507-01-432	507-01-432	507-01-432	507-01-432	507-01-43
43	Lockwasher - Kantlick #10	562-05-019	562-05-019	562-05-019	562-05-019	562-05-020
44	Sq. Hd. Pipe Plug - 1"					
45	Collar Pin $\frac{3}{16}$ Dia. x $\frac{1}{4}$					

* When "Sp" Air Eliminator (Pump Or Gravity Service) Is Teflon-Trimmed, Use Number In "AF" Column. Reference: Gasket & Repair Kits Available.

WHEN ORDERING PARTS. ALWAYS GIVE THE METER SERIAL NUMBER.